Shark

WWW.SHARKCLEAN.CO.UK

S4501UKJC

OWNER'S GUIDE

IMPORTANT SAFETY INSTRUCTIONS

For Household Use Only

WHEN USING YOUR SHARK® STEAM POCKET™ MOP, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR SHARK® STEAM POCKET™ MOP.

DANGER OF SCALDING.
Please use caution when using the steam mop. The steam emitted from the steam mop is very hot.

IMPORTANT:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

Children shall not use this appliance and close supervision is necessary for any appliance being used near children.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

1. Use the system only for its intended use.
2. **DO NOT** use outdoors.
3. **DO NOT** leave the appliance unattended when plugged in. Always unplug the power cord from the electrical outlet when not in use and before servicing.
4. **DO NOT** allow the appliance to be used by children. Close attention is necessary when used by or near children, pets or plants.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Use only as described in this manual.
7. Use only manufacturer's recommended accessories.
8. **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped or damaged. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the appliance is used.
9. To protect against a risk of electric shock, **DO NOT** immerse the steam mop into water or any other liquids.
10. **DO NOT** handle plug or steam mop with wet hands or operate appliance without shoes.
11. **DO NOT** pull or carry by power cord, use power cord as handle, close a door on the power cord, or pull the power cord around sharp edges or corners. Keep power cord away from heated surfaces.

12. **DO NOT** unplug by pulling on power cord. To unplug, grasp the plug not the power cord. Do not use extension cords or outlets with inadequate current carrying capacity.
13. **DO NOT** put any objects into openings. Do not use with any opening that is blocked.
14. **DO NOT** put hands or feet under the steam mop. Unit gets very hot.
15. Use **ONLY** on flat, horizontal surfaces. Do not use on walls, counters or windows.
16. **DO NOT** use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam sensitive materials.
17. Liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
18. **DO NOT** add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this appliance as this may damage the unit or make it unsafe for use. If you live in a hard water area, we recommend using distilled water in your steam mop.
19. When in use, NEVER turn the appliance over or on its side. **NEVER DIRECT STEAM TOWARDS PEOPLE, ANIMALS OR PLANTS.**
20. **NEVER LEAVE THE STEAM MOP IN ONE SPOT ON ANY SURFACE FOR ANY PERIOD OF TIME WHEN THE CLEANING POCKET IS ATTACHED AS THIS WILL DAMAGE YOUR FLOORS.**
21. Carefully remove the cleaning pocket immediately after you have unplugged and allowed the steam mop to cool.
22. When cleaning the steam mop, unplug the power cord from the electrical outlet and clean with a dry or damp cloth. Do not pour water or use alcohol, benzene or paint thinner on the unit.
23. Extreme caution should be exercised when using this appliance to clean stairs.
24. Never use steam mop without the cleaning pocket attached.
25. Keep your work area well lit.
26. Store steam mop indoors in a cool, dry place.
27. To avoid circuit overload, do not operate another appliance on the same socket (circuit) as the steam cleaner.
28. If an extension cord is absolutely necessary, an extension cord rated a minimum of 10 ampere, 1.0mm^2 cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange cord so that it cannot be pulled or tripped over.
29. **DO NOT** leave unattended when the system is connected to a power supply or electrical outlet. Turn off all controls before unplugging the unit.
30. **DO NOT** store unit with damp or wet cleaning pocket attached. Never leave the steam mop in one spot on any surface for any period of time with a damp or wet cleaning pocket attached as this will damage your floors
31. Always unplug and allow the steam mop to cool before removing or changing mop heads.
32. Make sure that the water tank door closed when using the appliance.

WARNING: Your steam mop is designed to clean hard floor surfaces that will withstand high heat. Do not use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax or some no wax floors, the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding. We also recommend that you check the use and care instructions from the floor manufacturer.

SAVE THESE INSTRUCTIONS

This appliance complies with the WEEE-Directive 2002/96/EC on the disposal of electrical and electronic equipment (WEEE).

This appliance complies with the European directives for electromagnetic compatibility (EMC) 2004/108/EC and its revisions, as well as Low Voltage Directive (LVD) 2006/95/EC and its revisions.

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmental safe recycling.

This product has no on/off switch and operates when plugged into the main supply source. Disconnect the plug from mains after use.

Although the product is not provided with standby mode or off mode, it still fulfills the requirements of 1275/2008/EC - the directive for Eco-Design requirements since according to technical justification, it is considered as inappropriate to provide standby and off modes when connecting to mains. To reduce energy consumption be sure to unplug the unit after use.

This manual covers model number:
S4501UKJC 11

TECHNICAL SPECIFICATIONS

Voltage:	220-240V~, 50/60Hz.
Power:	1550 Watts
Water	Capacity: 400ml

Contents

Thank you for purchasing the **Shark® Steam Pocket™** Mop.

Getting Started 2

Using Your **Shark® Steam Pocket™** Mop 5

Care and Maintenance 7

Getting Started

When assembling your steam mop there may be a little water in or around the water tank. This is because we test all of our steam mops 100% before you buy them, so you get a quality **Shark® Steam Pocket™** Mop.

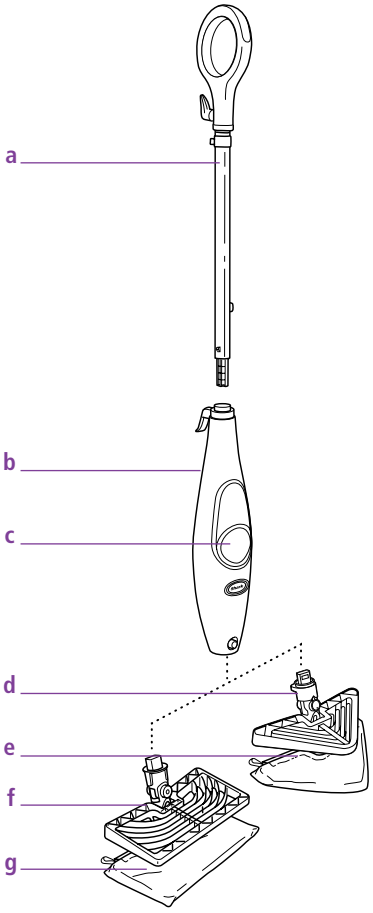

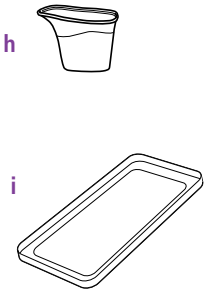

- **a** Mop Handle
- **b** Water Tank Cap (not shown)
- **c** Water Tank Viewing Window
- **d** Triangle Mop Head
- **e** Triangle Microfibre Cleaning Pocket
- **f** All-Purpose Mop Head
- **g** All-Purpose Microfibre Cleaning Pocket
- **h** Filling Flask
- **i** Carpet Glider

NOTE: Select cleaning accessories are included. Check the side panels of the box for what is included with your unit. Other accessories may be available for purchase.

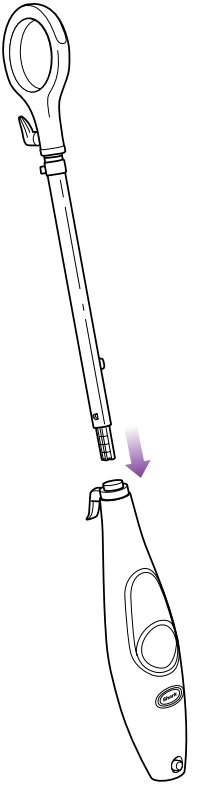

fig. 1

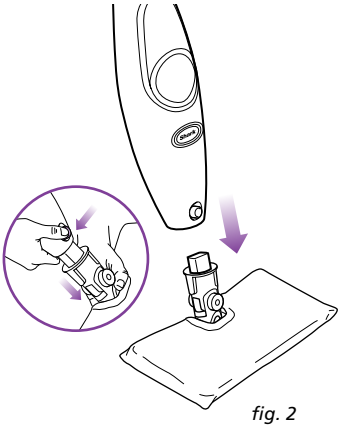

fig. 2

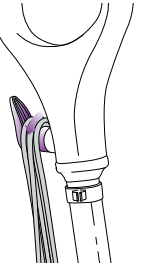

fig. 3

⚠ **IMPORTANT**: Always make sure the mop is **unplugged** from the wall when not in use. Never fill the mop, attach the mop head, or change or remove the microfibre cleaning pocket when the mop is plugged into the wall. To prolong the life of your **Shark® Steam Pocket™** Mop, we recommend using distilled water. Make sure you only add water to the tank. The addition of chemicals or cleaning solutions may damage the appliance and could be unsafe for you and your family.

ASSEMBLY

1. Insert the mop handle into the main body of the steam mop (into the tube that leads to the tank). Push the mop handle and main body of the steam mop together until you hear it "click" into place. (**Fig. 1**)
2. Snap the desired mop head into the mop body by lining up the groove on the back of the mop body with the groove on the back of the mop head. Push until you hear it "click" into place. (**Fig. 2)**
3. Hold the power cord and wrap it around the cord holders. (**Fig. 3**)

Getting Started - cont.

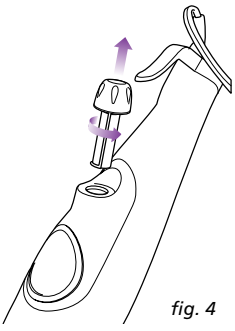

fig. 4

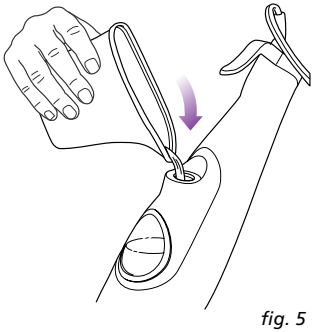

fig. 5

Calcium and mineral deposits can build up and impact the performance of your steam mop over time. To extend the life of your product we recommend that you use distilled water.

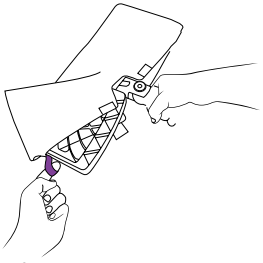

fig. 6

4 Turn the water tank cap counter clockwise and remove from the tank. (**Fig. 4**)

Use the filling flask to pour water into the tank. Do not fill past the fill line on the water tank. (**Fig. 5**)

5 After filling the tank, replace the water tank cap by placing back on the tank and turning it clockwise until tight.

IMPORTANT: Do not use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax or some no wax floors, the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding. We recommend that you check the use and care instructions from the floor manufacturer.

ATTACHING THE MICROFIBRE POCKET

1 Fit one side of the microfibre cleaning pocket onto the head first, then using the lavender loop, pull the pocket over the head. Attach the hook and loop quick fasteners on the top of the pocket to secure in place. (**Fig. 6**)

Using Your Shark® Steam Pocket™ Mop

IMPORTANT: Do not use the mop without attaching a microfibre cleaning pocket and adding water to the tank first. When you are using the mop for the first time, it might take longer than the normal 30 seconds to start steaming. Just pump the handle a few times in a downward motion to prime the pump.

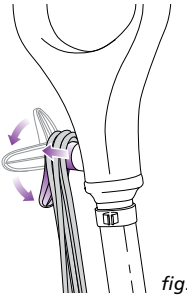

fig. 7

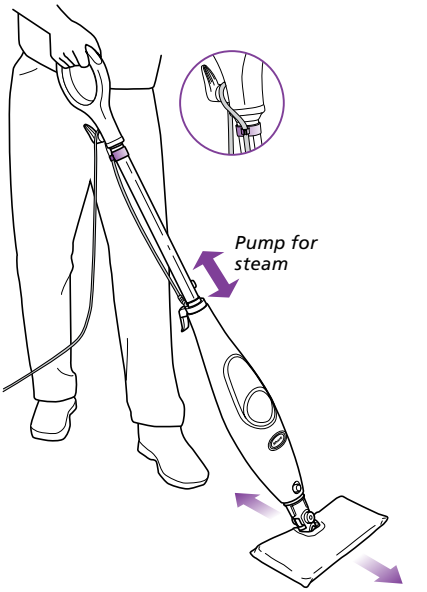

fig. 8

NOTE: Make sure the floors are swept or vacuumed before using the **Shark® Steam Pocket™** Mop.

1 Pull and twist the quick release cord holder to unwrap the power cord completely. (**Fig. 7**)

Plug into an electrical outlet. It takes approximately 30 seconds for the mop to heat up and the steam to be ready.

2 Pump the handle a few times in a downward motion. This pumping action will release steam as you mop and allows you to customise the amount of steam you want. Begin mopping with a forward and backward motion. The natural motion of mopping will produce steam. (**Fig. 8**)

NOTE: The steam mop is on when it is plugged in. Unplug when you want to turn it off.

Using Your Shark® Steam Pocket™ Mop - cont.

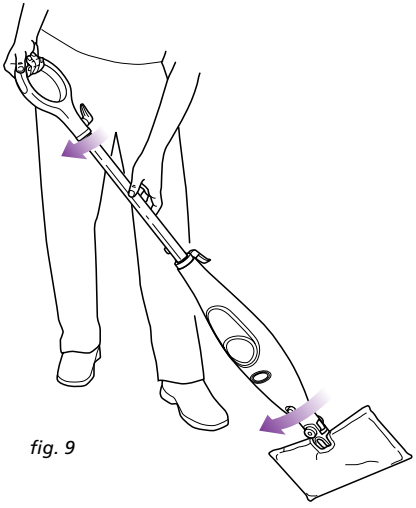

fig. 9

The steam mop will not clean your carpeting or area rugs. However, it is great for grooming and freshening.

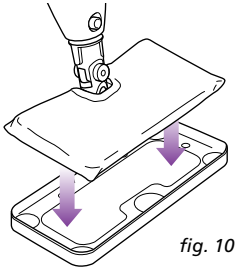

fig. 10

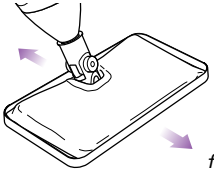

fig. 11

3 When one side of the microfibre cleaning pocket gets dirty, just flip the mop head and you can quickly continue cleaning with the other side. (**Fig. 9**)

⚠ **NOTE:** For deeper cleaning/sanitisation of household bacteria such as e-coli, salmonella, or StaphA., the area in question must be cleaned continuously for 30 seconds (or 30 back and forth strokes).

4 When the water tank is empty, the steam mop will stop producing steam. You can refill the water tank at any time as long as the mop is unplugged from the outlet. Follow the instructions from page 4. This applies to switching the mop heads or microfibre cleaning pocket as well.

⚠ **NOTE:** Please wait 2-3 minutes for the Steam Mop to cool off before removing the mop head or the microfibre cleaning pocket. Never leave the steam mop with a damp/wet microfibre cleaning pocket on any floor.

USING THE CARPET GLIDER

1 The Carpet Glider can be used with the All-Purpose Head to lightly steam your carpet and area rugs. Just place the mop head with the microfibre cleaning pocket attached into the glider. (**Fig. 10**)

2 Move the steam mop back and forth across a section of the carpet. (**Fig. 11**)

Care and Maintenance

AFTER USE AND STORAGE

1 When you have finished using the **Shark® Steam Pocket™** Mop, unplug the cord from the outlet and let the unit cool 2-3 minutes. Release the residual steam by pumping the handle several times before removing the microfibre cleaning pocket from the mop head.

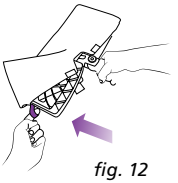

fig. 12



fig. 13

2 Remove the microfibre cleaning pocket by releasing the hook and loop fasteners and using the lavender loop on the side of the pocket to pull off. Avoid contact with the hot pocket or dirt. Then empty the water tank. (Fig. 12)

3 To store the Shark® Steam Pocket™ Mop hanging up; first remove the head (after it has cooled and the steam has been released) then hang on a large hook. (Fig. 13)

⚠ **NOTE:** If you want to store it standing upright, then make sure it's leaning against a wall for added support and safety. Always store your Shark® Steam Pocket™ Mop with the microfibre cleaning pocket removed and away from children or high traffic areas.

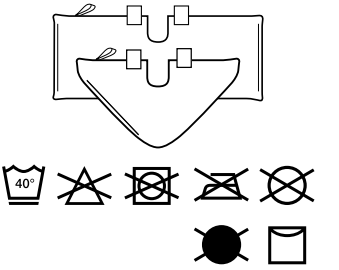

fig. 14

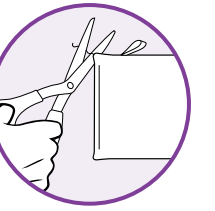

fig. 15

CARE OF YOUR CLEANING POCKET

1 We recommend washing your microfibre cleaning pockets separately from other fabrics to avoid picking up lint. **Only use liquid detergent (no powder detergent). Do not use any fabric softeners or bleach**. Line dry. (**Fig. 14**)

2 If there are loose threads on the cleaning pocket carefully cut the thread with scissors. Do not pull on them or cut at the base. (**Fig. 15**)

⚠ **IMPORTANT**: The cleaning pocket may be very hot from the steam. Use caution when removing. Let the unit cool for 2-3 minutes before removing the cleaning pocket.

AVOIDING CALCIFICATION IN YOUR STEAM MOP

Calcium and mineral deposits can build up and impact the performance of your steam mop over time. To extend the life of your product we recommend that you use distilled water.

JML, Unit 1 Eastside
Port of Tyne
South Shields
NE33 5SP
info@JMLgroup.co.uk
Freephone 0800 781 7831
www.sharkclean.co.uk

Registered address: JML House, NW5 3EG

Printed in China
Illustrations may differ from actual product.

S4501UKJC.E.130801.1